Compact Cylinder/Air Saving Type ROHS

 


Ø 32, Ø 40, Ø 50

Air consumption

Max. 46 % reduction

- Uses the air exhausted from the extension side to supply the retraction side, thus reusing the air (Built-in exhaust return circuit)
- Reduce air consumption just by piping to the product



- The dimensions and mounting dimensions are the same as those of the existing CDQ2 series model.
 - * For the through-hole mounting type only

Exhaust return air Exhaust return port Mormal air Extension port Built-in exhaust return circuit Built-in check valve and throttle valve With centralised piping

- **With rubber bumper**
- Small auto switches can be mounted on 3 surfaces.

Applicable auto switch: D-M9□



Specifications


D :	f 1	00	40	50					
Bore siz	e [mm]	32 40 50							
Action		Double acting, Single rod							
Fluid		Air							
Proof pressure		1.0 MPa							
Max. operating pressu	ure	0.7 MPa							
Min. operating pressu	ire	0.4 MPa							
Ambient and fluid ten	nperatures	With auto switch: -10 to 60 °C (No freezing)							
Lubrication		Not required (Non-lube)							
Piston speed	Extending operation	50 to 50	00 mm/s	50 to 300 mm/s					
ristori speed	Retracting operation		50 to 300 mm/s						
Stroke length tolerand	ce		0 to +1.0 mm*1						
Cushion			Rubber bumper						
	Retraction port	M5 >	Rc1/8						
Port size	Extension port	M5 >	Rc1/8						
	Exhaust return port								
Mounting orientation		Horizontal lateral, Vertical upward							
Min. theoretical output*2	Retracting operation	32 N	55 N	85 N					
Allowable kinetic ene	rgy	0.29 J	0.52 J	0.91 J					
Allowable lateral load at	rod end (At 30 stroke)	7.6 N 10.9 N 15.8 N							
Mounting		Basic type (Through-hole)							

- *1 Stroke length tolerance does not include the amount of bumper change.
- *2 Be aware that the cylinder output is reduced during the retraction operation. The cylinder output values in the table above are the min. values. Therefore, depending on the operating conditions, the output may be greater. Please contact your local sales representative for more details.

Standard Strokes

	[mm]
Bore size	Standard stroke
32, 40	5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 75, 100
50	10, 15, 20, 25, 30, 35, 40, 45, 50, 75, 100

Circuit Diagram

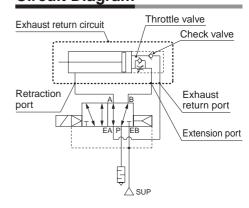






CDQ2B-X3150

Bore size

Dimensions Ø 32, Ø 40, Ø 50

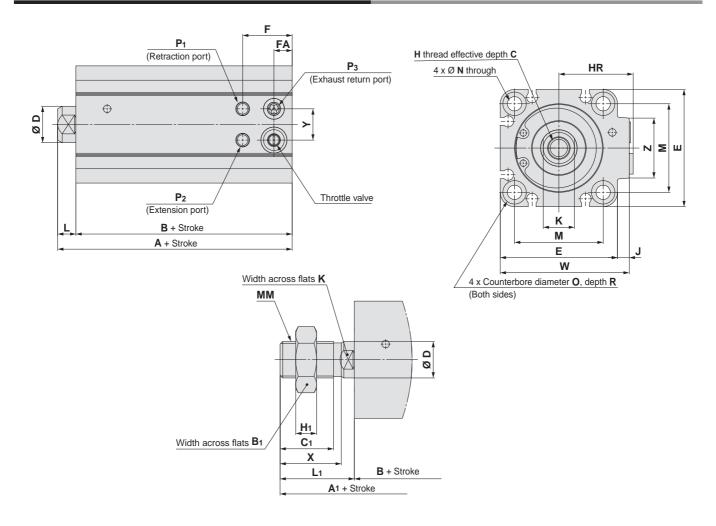

															[mm]
Bore size	Standard stroke	Α	В	С	D	E	F	FA	Н	HR	J	K	L	M	N
32	5, 10, 15, 20, 25, 30, 35, 40,	40	33	13	14	45	19	7	M8 x 1.25	28	4.5	12	7	34	5.5
40	45, 50, 75, 100	46.5	39.5	13	14	52	20.5	9	M8 x 1.25	32	5	12	7	40	5.5
50	10, 15, 20, 25, 30, 35, 40, 45, 50, 75, 100	48.5	40.5	15	18	64	24	9.5	M10 x 1.5	41	7	16	8	50	6.6

															[mm]
Bore size	0	P1	P2	P 3	R	W	Υ	Z	A 1	B ₁	C ₁	H ₁	L ₁	MM	X
32	9	M5 x 0.8	M5 x 0.8	M5 x 0.8	7	49.5	12	23	61.5	22	20.5	8	28.5	M14 x 1.5	23.5
40	9	M5 x 0.8	M5 x 0.8	M5 x 0.8	7	57	12	23	68	22	20.5	8	28.5	M14 x 1.5	23.5
50	11	Rc1/8	Rc1/8	M5 x 0.8	8	71	18	33	74	27	26	11	33.5	M18 x 1.5	28.5

Handling

△Warning

1. Residual pressure will remain in the exhaust return piping of this circuit.

To completely exhaust all of the residual pressure, install a 3-port valve for residual pressure exhaust in the exhaust return piping.

The adjustment range for the throttle valve for retraction operation speed adjustment is, starting from the fully closed position, within the number of rotations shown in the table below.

Bore size [mm]	Number of rotations
32, 40	3.5 rotations or less
50	4.5 rotations or less


To adjust the throttle valve, use a 3 mm flat head watchmaker's screwdriver.

The adjustment range for the throttle valve is, between the fully closed position and the open position, within the range indicated in the table above.

A retaining mechanism prevents the throttle valve from slipping out; however, it may spring out during operation if it is rotated beyond the range shown above.

∴ Caution

1. Pipe according to the circuit diagram shown below when using this cylinder.

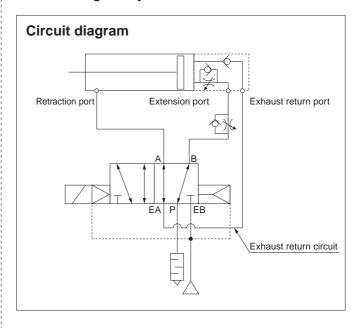

- 2. For exhaust return, the selection and installation of suitable fittings, tubes, and devices is required. Please contact your local sales representative for more details.
- 3. For the solenoid valve, select a single unit (body ported or base ported) external pilot type.
- 4. Follow the instructions below to adjust the speed of this cylinder.

Extending operation: Use the speed controller

(meter-in) installed between the extension port and the solenoid valve.

Retracting operation: Use the built-in throttle valve on the cylinder.

- 5. As the retracting operation of this cylinder is performed with low pressure and low thrust, refrain from applying more external force than necessary.
- 6. Pivot brackets cannot be used.





t
g
Г
Z
com
ee
nce.fr
ellas.gr
U
itomation.ie
citalia.it

Poland +48 222119600 www.smc.pl office@smc.pl Portugal +351 214724500 www.smc.eu apoioclientept@smc.smces. Romania +40 213205111 www.smcromania.ro smcromania@smcromania.ro Russia +7 8123036600 www.smc.eu sales@smcru.com Slovakia +421 (0)413213212 www.smc.sk office@smc.sk Slovenia +386 (0)73885412 www.smc.si office@smc.si Spain +34 945184100 www.smc.eu post@smc.smces.es Sweden +46 (0)86031200 www.smc.nu smc@smc.nu Switzerland +41 (0)523963131 www.smc.ch info@smc.ch Turkey +90 212 489 0 440 www.smc.uk sales@smc.uk UK +44 (0)845 121 5122 www.smc.uk sales@smc.uk	
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--

SMC Corporation Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249, Fax: 03-5298-5362