

Fieldbus System

(For Input/Output)



RoHS


IP65

PROFIsafe compatible product





Product Safety
Functional
Safety
www.tuv.com
ID: 0600000000

- Product certified by a third-party organisation (IEC 61508/IEC 62061 SIL 3 ISO 13849 PL e/Cat. 4)
- Single channel (1 out of 1): 8 safety inputs (SIL 2/PL d) or dual channel (1 out of 2): 4 safety inputs (SIL 3/PL e)
- The individual control of 3 zones for valves and 1 zone for the output modules.

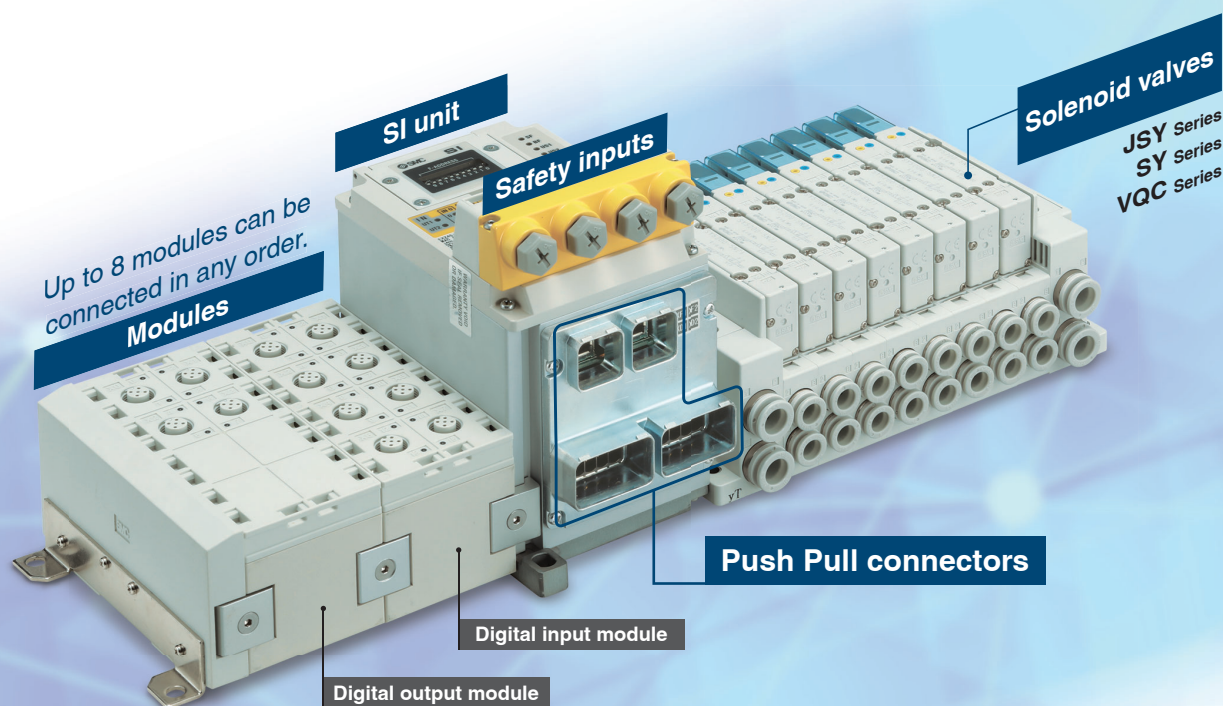


AIDA*1 specifications compliant

Push Pull Connectors One-touch mounting/removal allows for reduced labor.

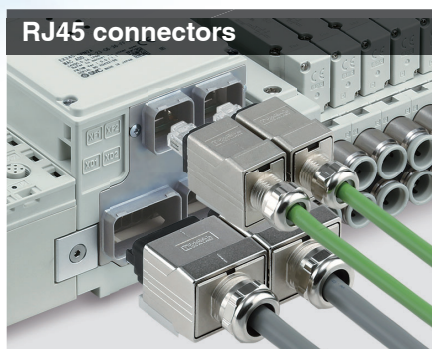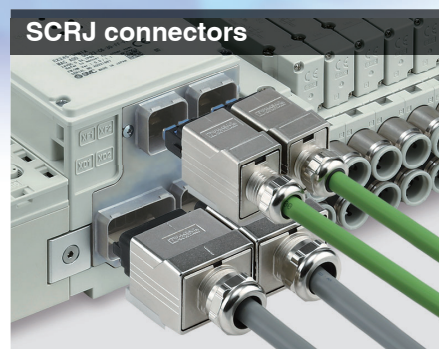

*1 Automation Initiative of German (Deutschland) Automobile Manufacturers.

General-purpose connectors

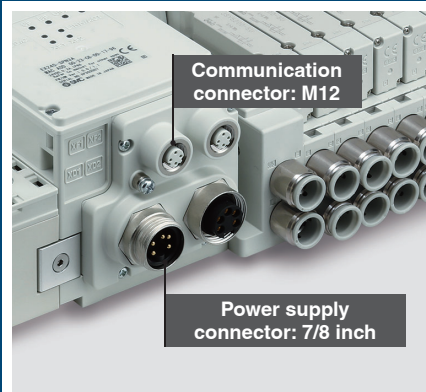

EX245 Series





EMC-EX245-01A-UK

Supports safety communication (PROFIsafe)

PROFIsafe




PROFIsafe is established as an international standard (IEC 61784-3-3). It is a communication protocol that transmits safety-related data by PROFINET communication and can be used up until safety standards ISO 13849-1 PL e and IEC 61508/IEC 62061 SIL 3.

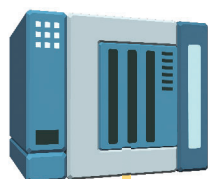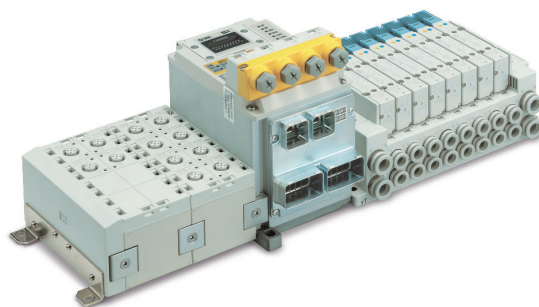

PROFINET/PROFIsafe compatible PLC



The PROFINET/PROFIsafe compatible PLC allows for PROFINET and PROFIsafe compatible SI units to be mixed on one communication line.

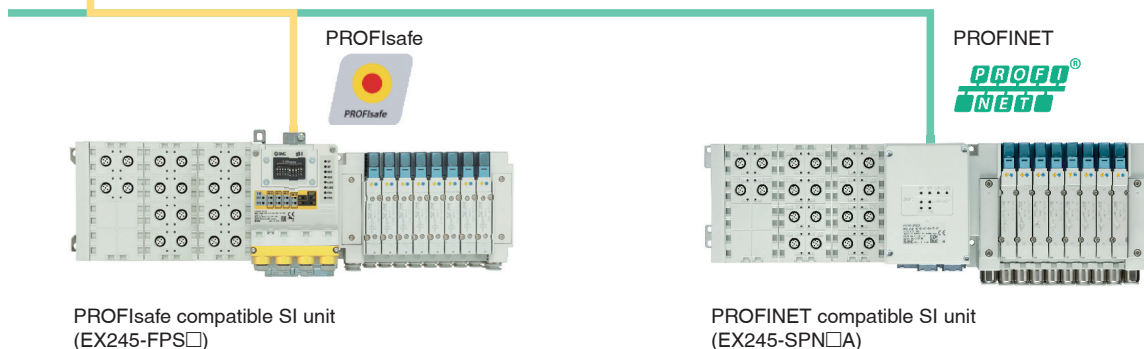

Compliant with safety standards

PROFIsafe

The aim is to facilitate a safe design (featuring ISO/IEC compliance) of the customer's equipment and facilities. The EX245-FPS□ has been certified under the following categories by a third-party organisation (TÜV Rheinland).



Product Safety
Functional
Safety
www.tuv.com
ID 0600000000

IEC 61508/IEC 62061 SIL 3
ISO 13849 PL e/Cat. 4

· SIL (Safety Integrity Level)

A safety integrity level as defined by international standard IEC 61508/62061
There are 4 levels of safety, with the lowest being SIL 1 and the highest being SIL 4.

· PL (Performance Level)


A scale used to define the capability of safety-related parts to perform a safety function as defined by international standard ISO 13849
There are 5 levels of safety function, with the lowest being PL a and the highest being PL e.

Safety Output


PROFIsafe

The EX245-FPS□ has safety outputs inside the product that can control 3 zones for valves and 1 zone for output modules individually. When the safety switch is turned OFF by directive from the PLC, the voltage supplied to the valve or output module is shut off, and it switches to safe state.

The safety switch of this product has two redundancies, one on the 24 V side and the other on the 0 V side. It continuously runs diagnostics. The safety switch is turned OFF in the event of an error detection.

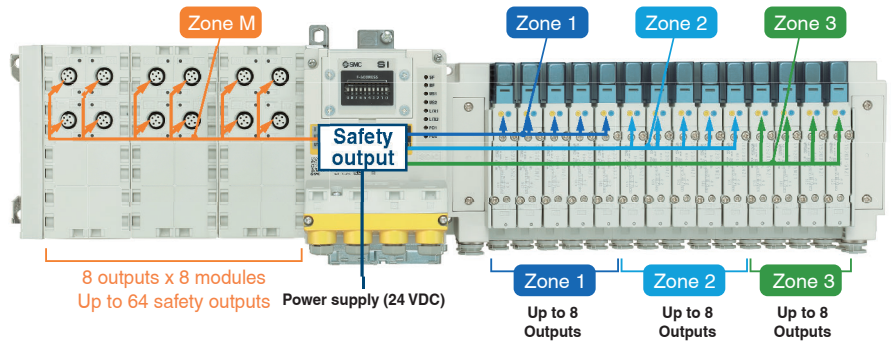

The valve/actuator will not turn ON when the PROFIsafe signal is OFF, even if an ON instruction is given via PROFINET signal. Only when both PROFINET and PROFIsafe instruct the device to turn ON will the valve/actuator turn ON.

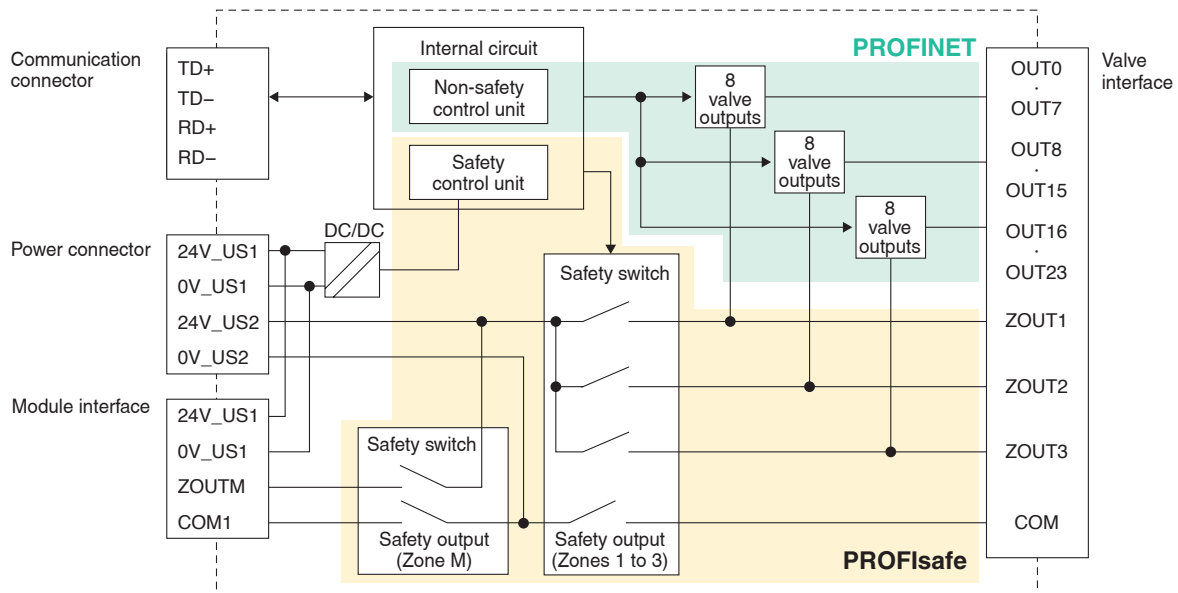

Safety Definition

The safe state of the EX245-FPS□ is a condition in which the safety output described above is turned OFF to shut off the supply of power to the valve manifold. This product does not cover valve manifolds that are being used in connection with this product or the safety function and safe state of electric/air equipment that includes a peripheral circuit.



Safety Input

PROFIsafe

The EX245-FPS□ is equipped with safety inputs. The safety inputs of this product can connect to components (e.g. laser scanners, light curtains, etc.) that are compatible with the safety inputs.

The safety input can be loaded in 2 ways:

- Single channel (1 out of 1): 8 safety inputs (SIL 2/PL d)
- Dual channel (1 out of 2): 4 safety inputs (SIL 3/PL e)

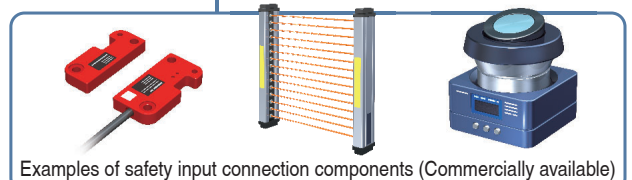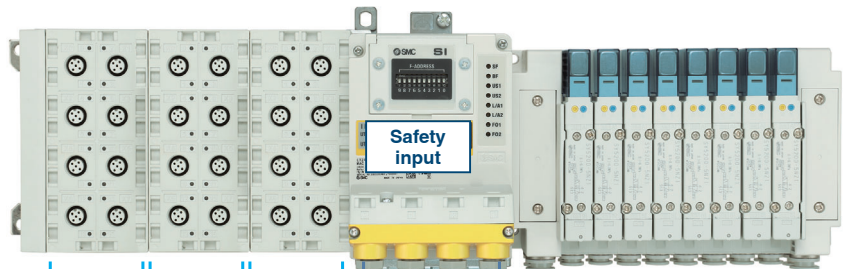

MRP function


PROFIsafe

MRP (Media Redundancy Protocol) function

Communication can be continued even if one of the communication cables in the network is disconnected or damaged.

Furthermore, as it is possible to identify the disconnection point quickly, the network disconnection time can be kept within 200 ms.


* In order to use the MRP function, the PLC must be able to support it.

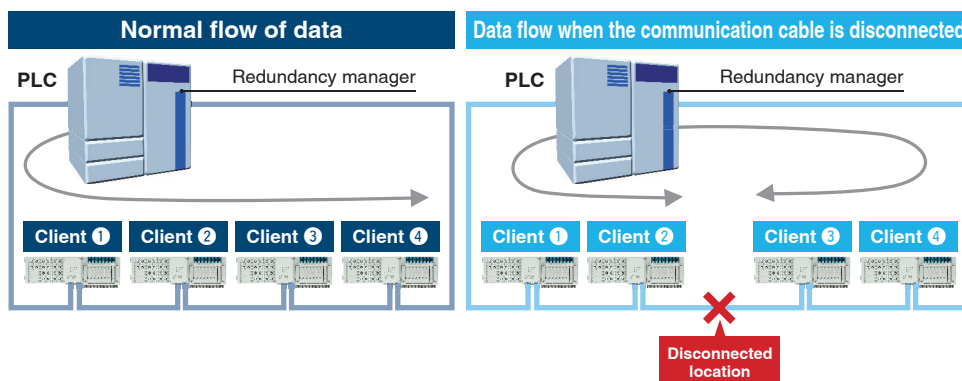

Fibre-optic cable maintenance alarm

PROFIsafe

This feature continuously monitors the received light intensity from the fibre-optic cable and reports it to the PLC. Any loss of intensity is an indicator of damage to the cable, so may give a warning before communication is lost. By using preventative maintenance, you can avoid unexpected shutdowns.

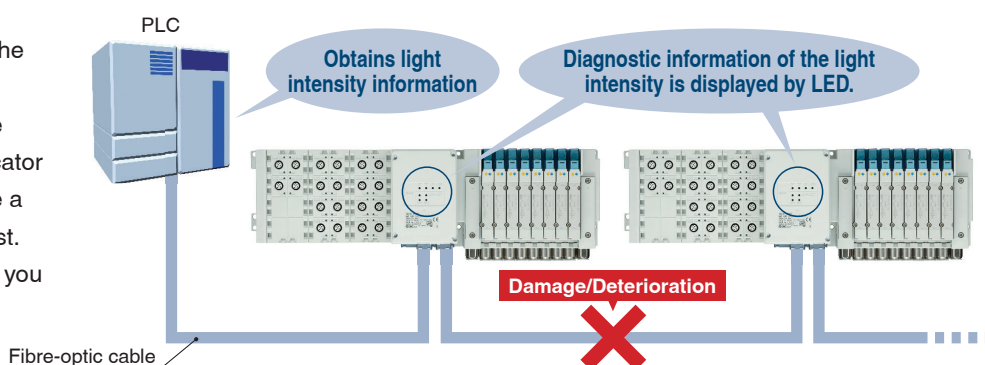


Safety Input/Output Construction Example

PROFIsafe

"Available for the EX245-FPS1"

When using a PROFIsafe compatible SI unit

- Separate safety input/output units (commercially available) are not required. (Space saving)
- Multi-zone safety outputs can be individually controlled.

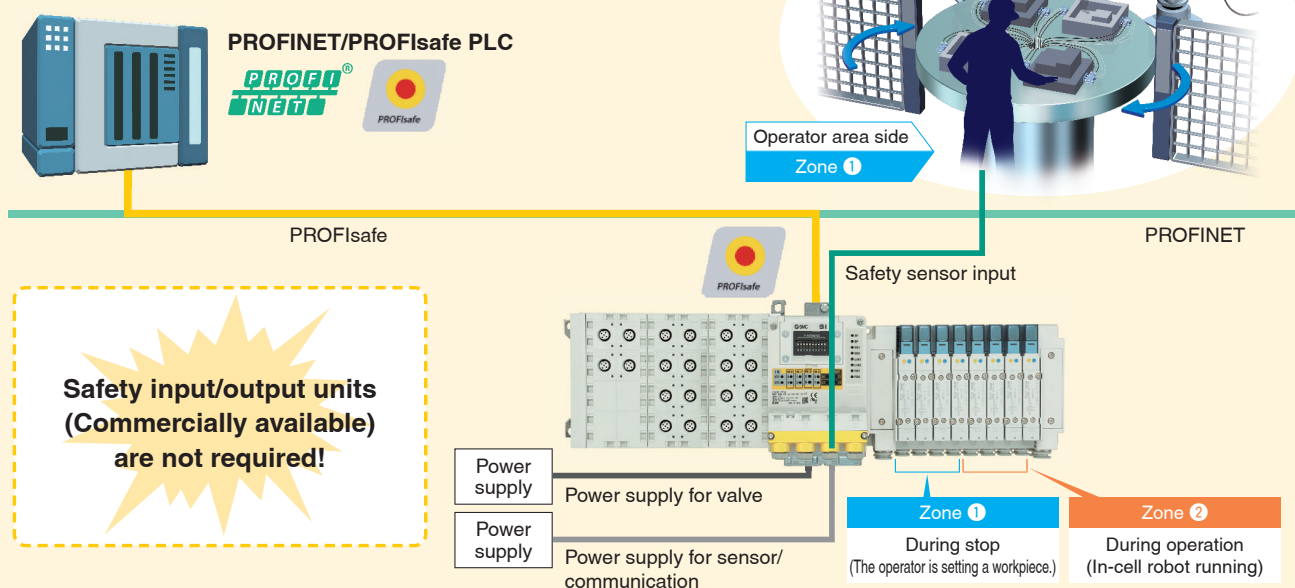

⚠ Safety of the machine or system

The manufacturer of the machine/system and its user are responsible for the safety of the machine/system. Use of the EX245-FPS□ requires machine/system safety concepts which are in accordance with the corresponding directives and standards, safety function validation, and hazard and risk analysis. Target SILs (IEC 61508/62061 compliance) and performance levels/categories (ISO 13849 compliance) are determined based on the risk analysis. For more information, refer to the "Safety of the machine or system" section in the operation manual of the EX245-FPS□.

Fieldbus System For Input/Output


EX245 Series



RoHS

IP65

Construction

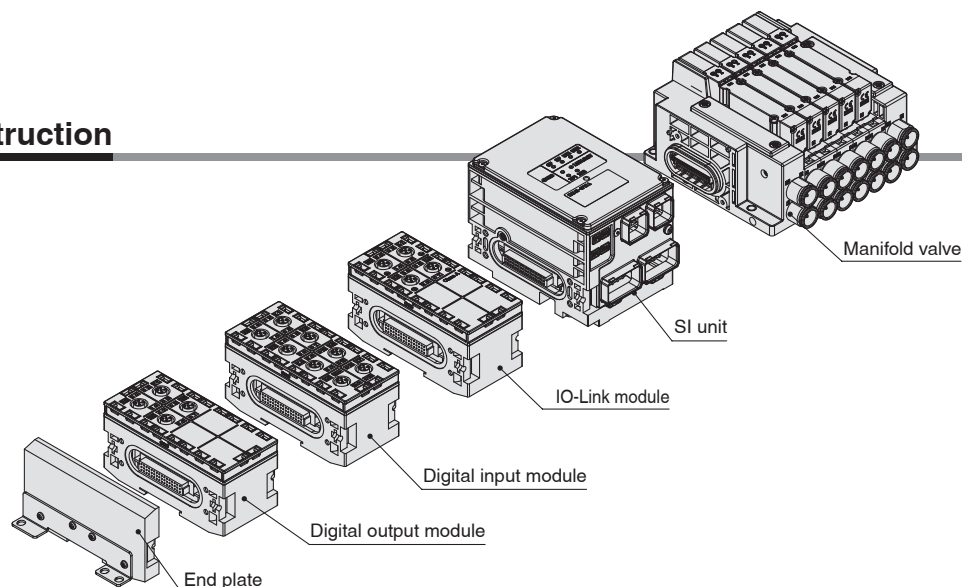

How to Order

SI Unit

EX245 - FPS1

Connector type

Symbol	Protocol	Communication connector	Power supply connector
FPS1	PROFIsafe	Push Pull connector (SCRJ): 2 pcs.	Push Pull connector (24 V): 2 pcs.
FPS2		Push Pull connector (RJ45): 2 pcs.	Push Pull connector (24 V): 2 pcs.
FPS3		M12 connector (4-pin, Socket, D-coded): 2 pcs.	7/8 inch connector (5-pin, Plug): 1 pc. 7/8 inch connector (5-pin, Socket): 1 pc.



EX245-FPS1



EX245-FPS2



EX245-FPS3

Digital Input Module

EX245 - DX1



Digital input module specification

DX1	Digital input (16 inputs)
------------	---------------------------

Digital Output Module

EX245 - DY1



Digital output module specification

DY1	Digital output (8 outputs)
------------	----------------------------

End Plate

EX245 - EA2 - 1



Bracket

Bracket


1	General-purpose
2	Without bracket

* Refer to the **Web Catalogue** for manifold valve part numbers.

EX245 Series

Specifications

SI Unit (EX245-FPS□) PROFIsafe

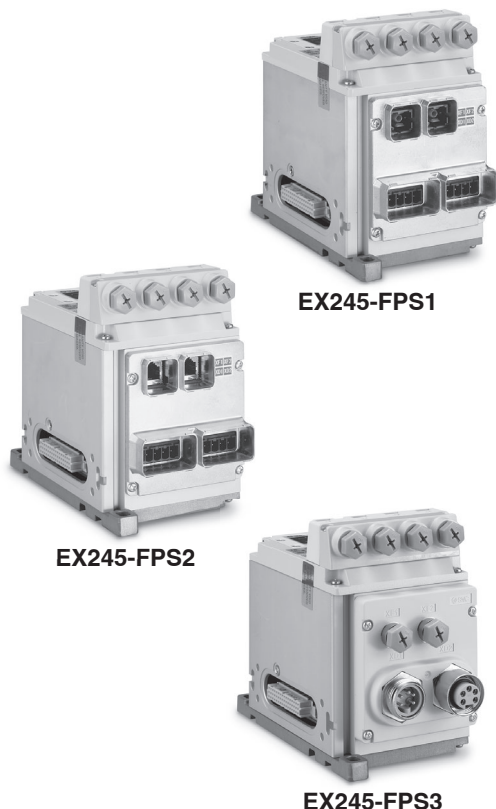

Model			EX245-FPS1	EX245-FPS2	EX245-FPS3
Communication	Protocol		PROFINET, PROFIsafe		
	Device type		PROFINET IO		
	Communication speed		100 Mbps full duplex		
	Applicable function		MRP function, Conformance Class C, NET Load Class I		
Fiber-optic cable maintenance alarm			—		
Electrical	Internal current consumption (US1)		350 mA or less	300 mA or less	
	Loop through current between power connectors		16 A	10 A	
	Operating voltage/	US1	24 VDC +20 %/-15 %, 6 A		
	Max. current	US2	24 VDC +20 %/-15 %, 4 A (Excludes valves)		
Safety input	Number of inputs		Dual channel: 4 inputs, Single channel: 8 inputs		
	External supply voltage		24 VDC +20 %/-15 %		
	Max. supply current		UT1: 2 A, UT2: 1 A		
	Cross-circuit detection		Yes		
	Over current/Short-circuit detection function		Yes		
	Input type		PNP		
	ON voltage		11 to 30 V		
	OFF voltage		-3 to 5 V		
	Input current (at 24 VDC)		Typ. 3.8 mA		
	Input characteristics		Type 3 (IEC 61331)		
Safety output	Number of safety outputs	Valve side	3 zones		
		Module side	1 zone		
	Max. current	Valve side	1.5 A (Total of 3 zones)		
		Module side	4 A		
	Short-circuit protection		Yes		
	Power supply source		US2		
Output	Output type		PNP		
	Number of outputs		8 outputs/zone, Total of 24 outputs		
	Load		Solenoid valve with surge voltage suppressor of 24 VDC, 1 W or less (SMC)		
	Protection		Short-circuit protection		
	Power supply		24 VDC, 1.5 A		
General	Max. number of modules		8		
	Max. number of digital inputs		128		
	Max. number of digital outputs		64		
	Applicable modules		Input module, Output module		
	Weight		1,100 g		1,200 g
Legislation/Standards			CE (EMC/RoHS/Machinery directive), UKCA (EMC/RoHS/Machinery Regulations), (UL (CSA) compliant)		


* The configuration file can be downloaded from the SMC website: <https://www.smc.eu>

Specifications

EX245-FPS□

Manifold Wiring Example

* For details on input/output module connection, refer to the operation manual.

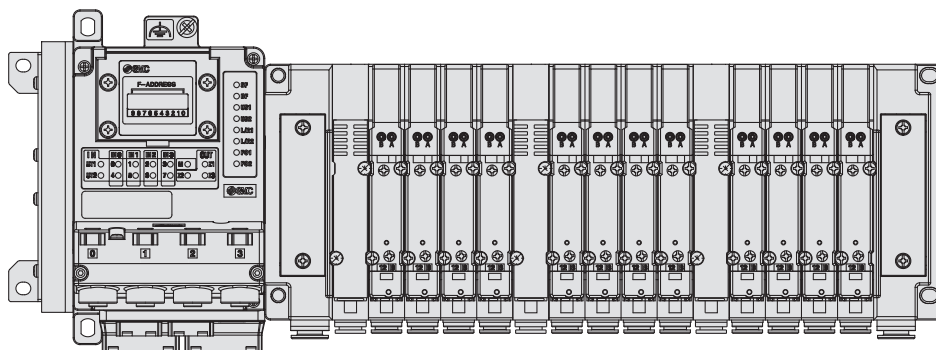

<Valve interface pin arrangement>

Pin no.	Valve zone	Signal name	Function
1	Common	M OUT1	Common 0 V
2			
3			
4	Zone 1	Z OUT1	Zone 1: Safety output
5		SOL0	Output 0 (Output is available only when Zone 1 is turned ON.)
6			
11	Zone 2	SOL7	Output 7 (Output is available only when Zone 1 is turned ON.)
12		Z OUT2	Zone 2: Safety output
13		SOL8	Output 8 (Output is available only when Zone 2 is turned ON.)
20	Zone 3	SOL15	Output 15 (Output is available only when Zone 2 is turned ON.)
21		Z OUT3	Zone 3: Safety output
22		SOL16	Output 16 (Output is available only when Zone 3 is turned ON.)
29		SOL23	Output 23 (Output is available only when Zone 3 is turned ON.)

Zone 1						Zone 2						Zone 3					
Pin no.	3	4	6	8	10	12	13	15	17	19	21	22	24	26	28		
Signal name	Z OUT 1	SOL 0	SOL 2	SOL 4	SOL 6	Z OUT 2	SOL 8	SOL 10	SOL 12	SOL 14	Z OUT 3	SOL 16	SOL 18	SOL 20	SOL 22		
Station no.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15		
Signal name		SOL 1	SOL 3	SOL 5	SOL 7		SOL 9	SOL 11	SOL 13	SOL 15		SOL 17	SOL 19	SOL 21	SOL 23		
Pin no.		5	7	9	11		14	16	18	20		23	25	27	29		
Wiring specifications	Single	Double	Double	Double	Double	Single	Double	Double	Double	Double	Single	Double	Double	Double	Double		

The stations corresponding to the safety outputs (Z OUT n) are configured by single wiring.

Specifications



EX245-DX1



EX245-DY1



EX245-EA2-□

Common for All Units/Modules

Item	Specifications
Operating temperature range	Operating: -10 to 50 °C, Stored: -20 to 60 °C (No condensation)
Operating humidity range	Operating, Stored: 35 to 85 % RH (No condensation)
Withstand voltage	500 VAC for 1 minute between external terminals and FE
Insulation resistance	500 VDC, 10 MΩ or more between external terminals and FE
Enclosure	IP65 (Manifold assembly, With seal cap)

Digital Input Module

Model		EX245-DX1
Input	Input type	PNP
	Input connector	M12 (5-pin) socket*1
	Number of inputs	16 inputs
	Supplied voltage	24 VDC
	Max. supplied current	0.5 A/Connector, 2 A/Module
	Protection	Short-circuit protection
	Input current (at 24 VDC)	Typ. 4.5 mA
	ON voltage	11 to 30 V
	OFF voltage	-3 to 5 V
	Internal current consumption	50 mA or less
Weight		280 g
Legislation/Standards		CE (EMC/RoHS/Machinery directive), UKCA (EMC/RoHS/Machinery Regulations), (UL (CSA) compliant)

*1 An M12 (4-pin) connector can also be connected.

Digital Output Module

Model		EX245-DY1
Output	Output type	PNP
	Output connector	M12 (5-pin) socket*1
	Number of outputs	8 outputs
	Supplied voltage	24 VDC
	Max. load current	0.5 A/Output, 2 A/Module
	Protection	Short-circuit protection
Current consumption		50 mA or less
Weight		280 g
Legislation/Standards		CE (EMC/RoHS/Machinery directive), UKCA (EMC/RoHS/Machinery Regulations), (UL (CSA) compliant)

*1 An M12 (4-pin) connector can also be connected.

End Plate


Model	EX245-EA2-1	EX245-EA2-2
Bracket	Yes General-purpose	No
Weight	120 g	80 g

EX245 Series


Dimensions/Parts Description

SI unit

EX245-FPS1/2

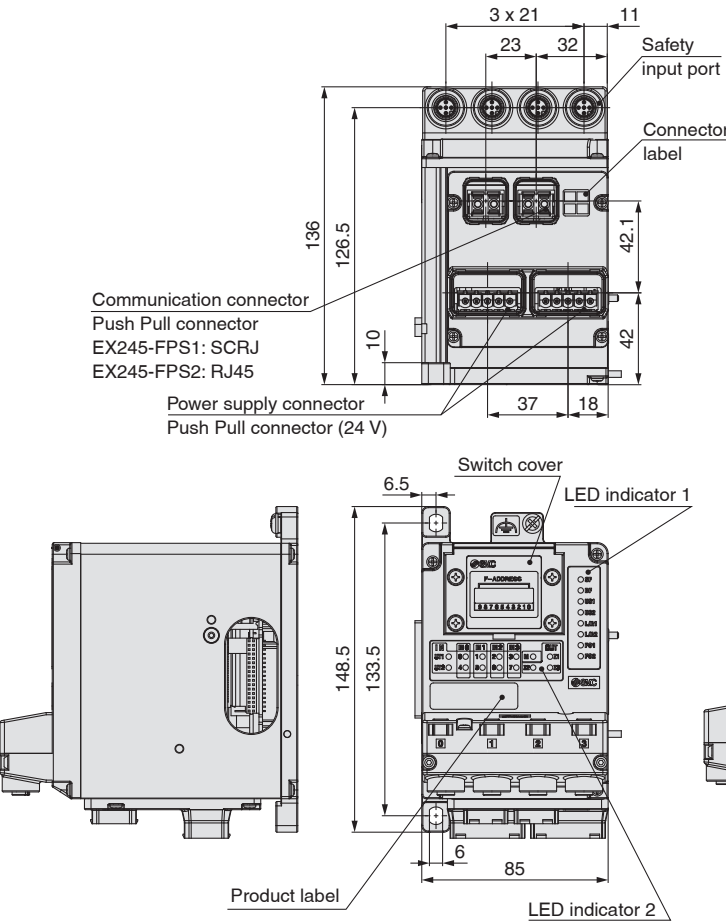


EX245-FPS3

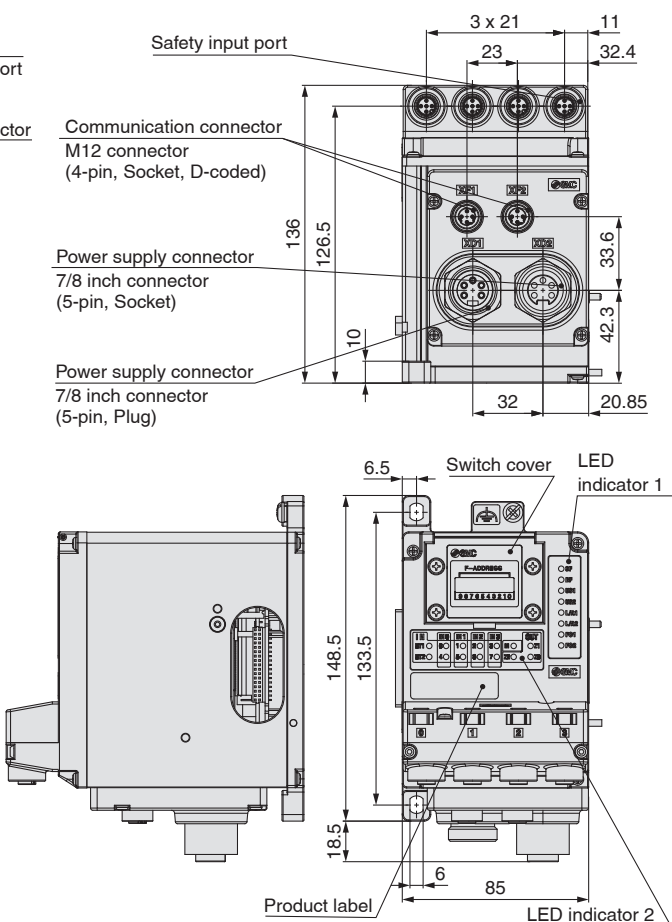


Digital Input Module

EX245-DX1

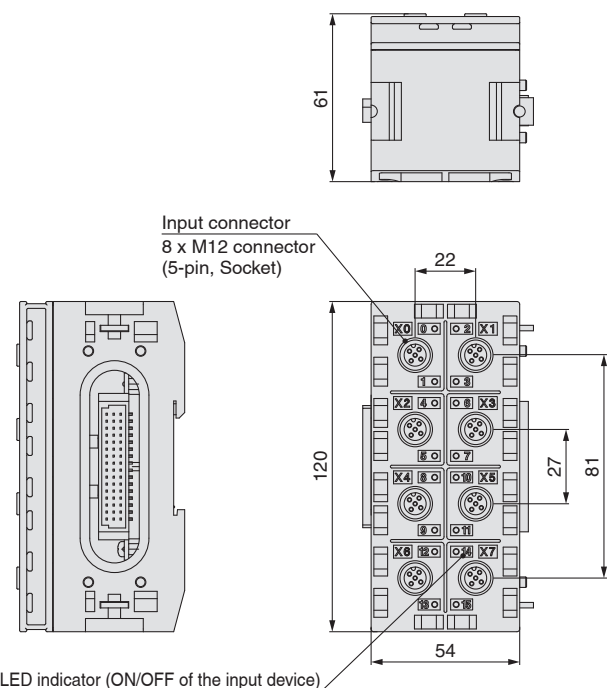

Digital Output Module


EX245-DY1

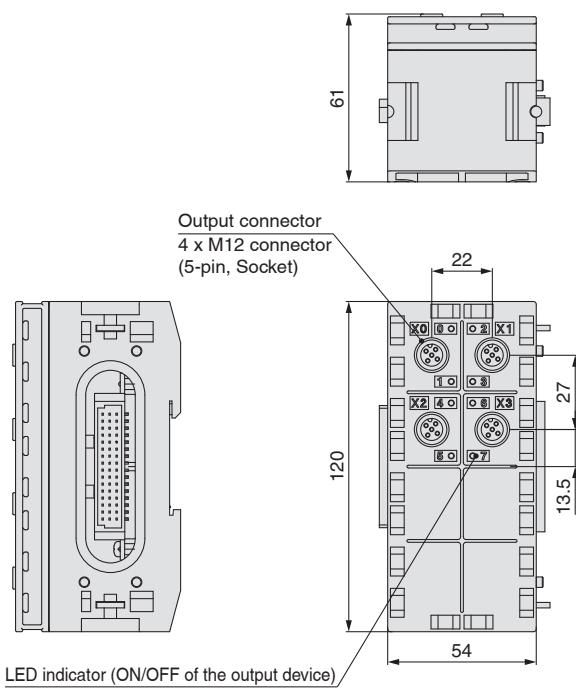



Dimensions/Parts Description

End Plate

EX245-EA2-1 (General-purpose bracket)

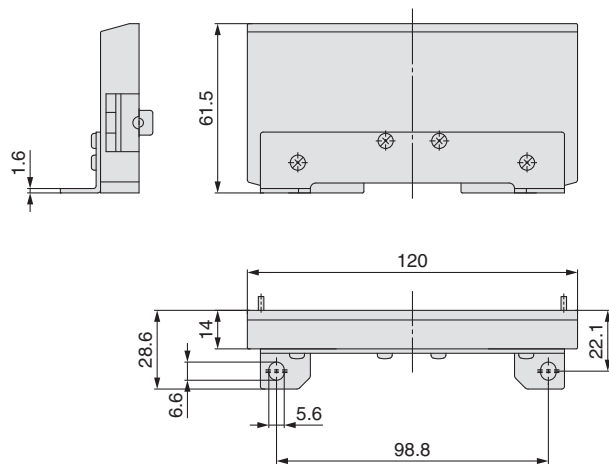

EX245-EA2-2 (Without bracket)

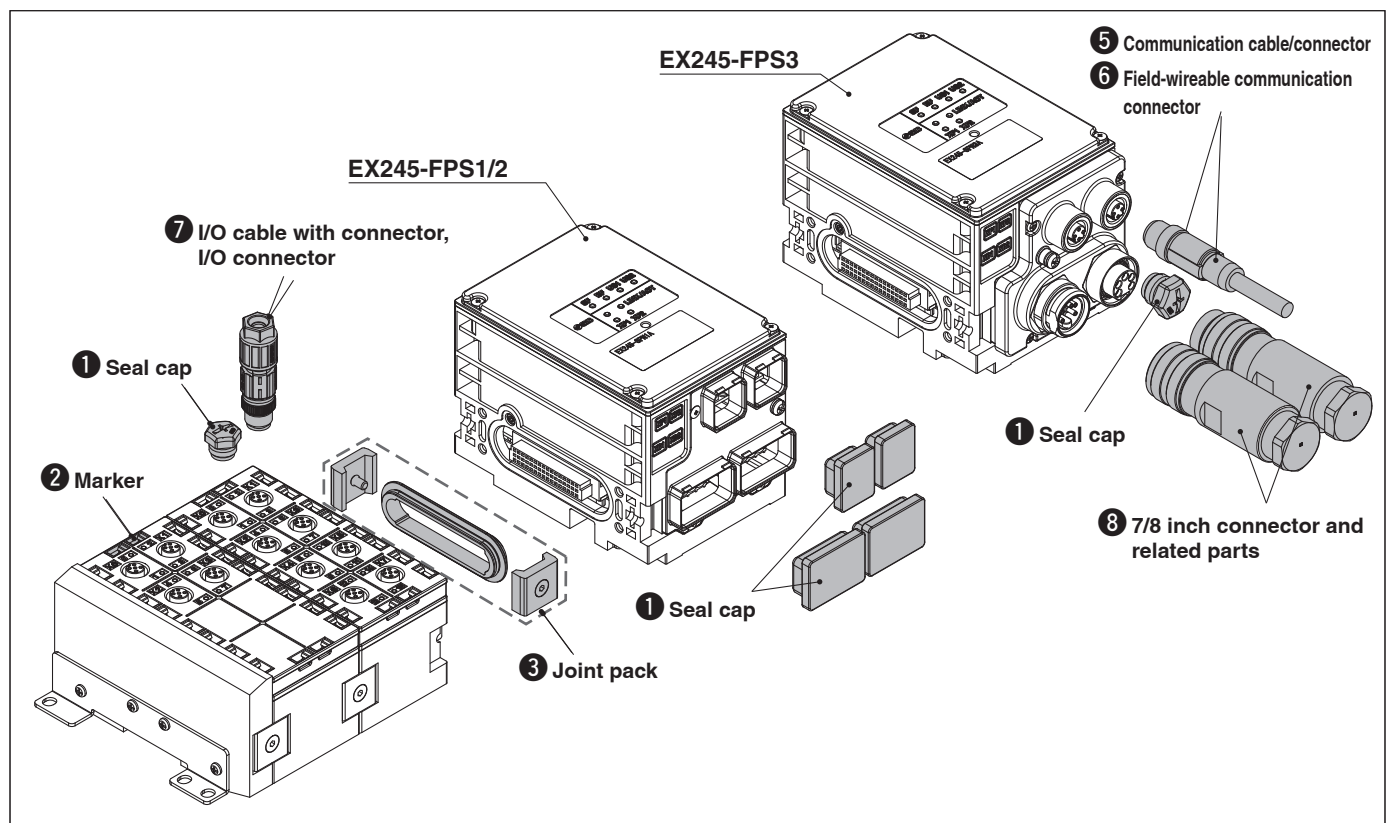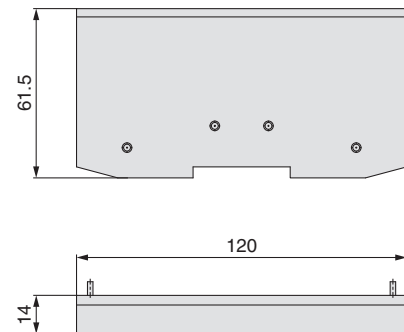

EX245 Series Accessories


① Seal Cap (10 pcs.)

Be sure to mount a seal cap on any unused I/O connectors. Otherwise, the specified enclosure cannot be maintained.

EX9-AWTS
For M12 (10 pcs.)



 EX245-AWC
For communication connectors (10 pcs.)

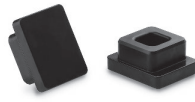

EX245-AWP
For power supply connectors (10 pcs.)



Number of included seal caps


Product number	EX9-AWTS
EX245-FPS1/2	4
EX245-FPS3	6

Seal cap for communication connector and power supply connector are included when **EX245-SPN1A/2A** or **EX245-FPS1/2** is shipped (2 caps for each unit).

② Marker (1 sheet, 88 pcs.)


The signal name of I/O device and each module name can be entered and mounted on each module.

EX600-ZT1

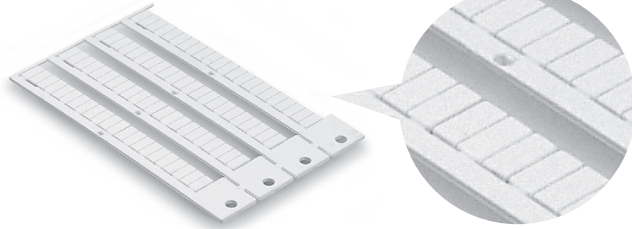

③ Joint Pack

EX245-ZJP

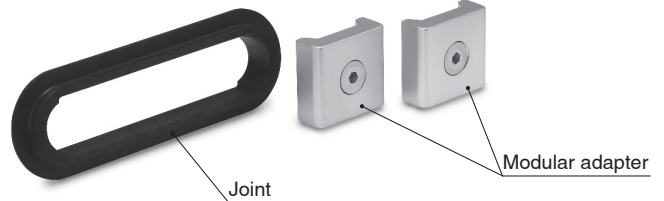

Included when **EX245-DX1/DY1**, **EX245-EA2-□** are shipped.

④ 7/8 Inch Connector and Related Parts

· Power supply cable (7/8 inch connector)

PCA-1558810 Straight 2 m
PCA-1558823 Straight 6 m



· Power supply field-wireable connector (7/8 inch)
[Compatible with AWG22-16]

PCA-1578078 Plug
PCA-1578081 Socket




⑤ Communication Cable/Connector

EX9-AC 005 EN-PSPS (With connector on both sides (Plug/Plug))

• Cable length (L)

005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

Item	Specifications
Cable O.D.	Ø 6.5 mm
Conductor nominal cross section	0.34 mm ² /AWG22
Wire O.D. (Including insulator)	1.55 mm
Min. bending radius (Fixed)	19.5 mm

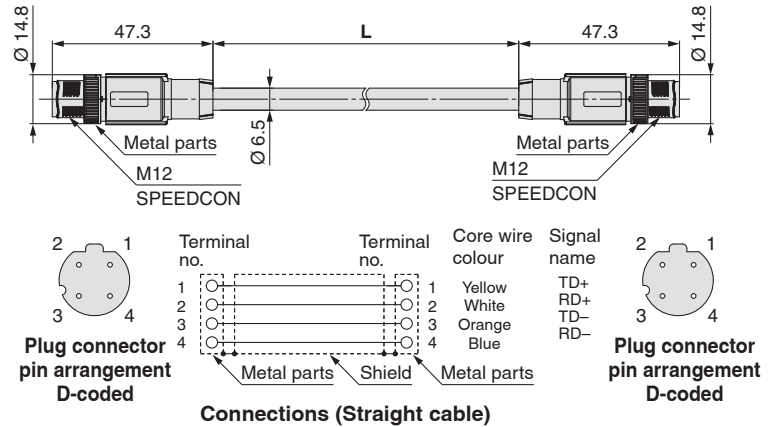


EX9-AC 005 EN-PAPA (With angled connector on both sides (Plug/Plug))

• Cable length (L)


005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

Item	Specifications
Cable O.D.	Ø 6.5 mm
Conductor nominal cross section	0.34 mm ² /AWG22
Wire O.D. (Including insulator)	1.55 mm
Min. bending radius (Fixed)	19.5 mm

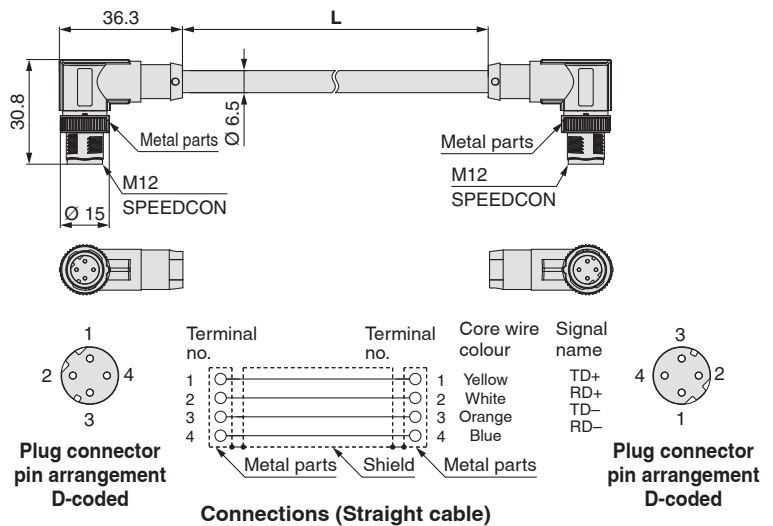

PCA-1446566 (Plug)

Item	Specifications
Cable O.D.	Ø 6.5 mm
Conductor nominal cross section	AWG22
Wire O.D. (Including insulator)	1.55 mm
Min. bending radius (Fixed)	45.5 mm

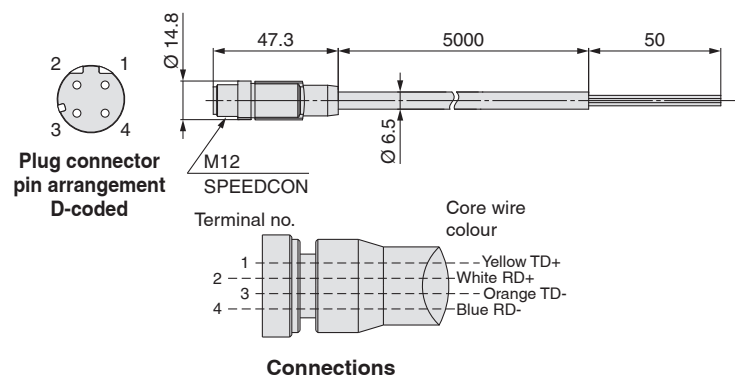


EX245 Series

5 Communication Cable/Connector

EX9-AC 020 EN-PSRJ (Plug/RJ-45 connector)

● Cable length (L)

010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

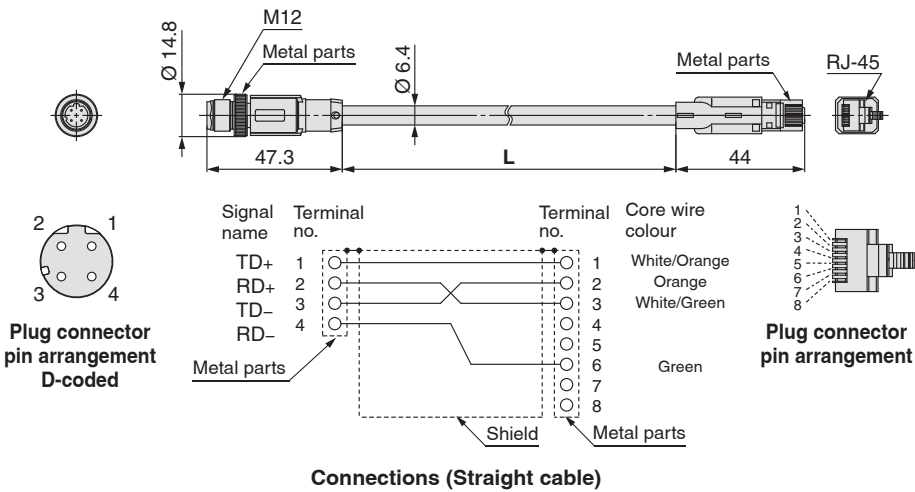

Item	Specifications
Cable O.D.	Ø 6.4 mm
Conductor nominal cross section	0.14 mm ² /AWG26
Wire O.D. (Including insulator)	0.98 mm
Min. bending radius (Fixed)	26 mm


6 Field-wireable Communication Connector

PCA-1446553

Applicable Cable

Item	Specifications
Cable O.D.	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.34 mm ² /AWG26 to 22


* The table above shows the specifications for the applicable cable. Adaptation for the connector may vary on account of the conductor construction of the electric wire.

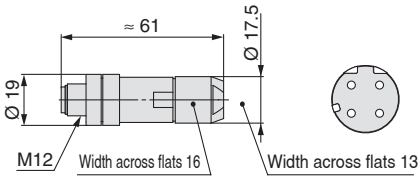

7 I/O Cable with Connector, I/O Connector

Name	Use	Part no.	Description
Cable with connector		PCA-1557769	Cable with M12 connector (4 pins/3 m)
		PCA-1557772	Cable with M8 connector (3 pins/3 m)
Field-wireable connector		PCA-1557730	Field-wireable connector (M8/3 pins/Plug/Piercecon® connection)
		PCA-1557743	Field-wireable connector (M12/4 pins/Plug/QUICKON-ONE connection/SPEEDCON)
		PCA-1557756	Field-wireable connector (M12/4 pins/Plug/QUICKON-ONE connection/SPEEDCON)
Y connector		PCA-1557785	Y connector (2 x M12 (5 pins)-M12 (5 pins)/SPEEDCON)
		PCA-1557798	Y connector (2 x M8 (3 pins)-M12 (4 pins)/SPEEDCON)

* When using the Y connector, connect it to the connector on the I/O module through the sensor cable with the M12 connector (PCA-1557769).

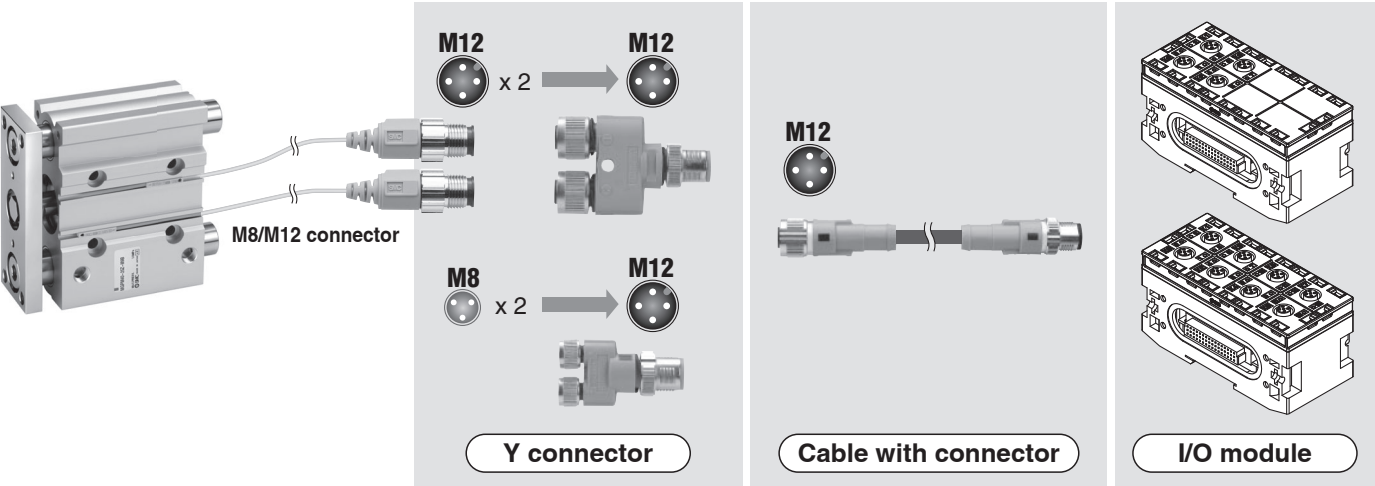



EX245 Series

Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For fieldbus system precautions, refer to the “Operation Manual” on the SMC website: <https://www.smc.eu>

Operating Environment

Caution

1. Select the proper type of enclosure according to the operating environment.




IP65 is achieved when the following conditions are met.

- 1) Provide appropriate wiring of the electrical wiring cables, communication connectors, and cables with M12 connectors.
- 2) Appropriately mount the SI unit, each module, and the manifold valve.
- 3) Be sure to mount a seal cap on any unused connectors.

If using in an environment that is exposed to water splashes, please take measures such as using a cover.

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) ¹⁾, and other safety regulations.

-  **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
-  **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Danger:** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- 1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
ISO 4413: Hydraulic fluid power – General rules relating to systems.
IEC 60204-1: Safety of machinery – Electrical equipment of machines.
(Part 1: General requirements)
ISO 10218-1: Manipulating industrial robots - Safety.
etc.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.
If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty.
A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

SMC Corporation (Europe)

Austria	+43 (0)2262622800	www.smc.at	office@smc.at
Belgium	+32 (0)33551464	www.smc.be	info@smc.be
Bulgaria	+359 (0)2807670	www.smc.bg	office@smc.bg
Croatia	+385 (0)13707288	www.smc.hr	office@smc.hr
Czech Republic	+420 541424611	www.smc.cz	office@smc.cz
Denmark	+45 70252900	www.smc.dk.com	smc@smcdk.com
Estonia	+372 6510370	www.smc-pneumatics.ee	smc@info@smcee.ee
Finland	+358 207513513	www.smc.fi	smc@info@smc.fi
France	+33 (0)164761000	www.smc-france.fr	info@smc-france.fr
Germany	+49 (0)61034020	www.smc.de	info@smc.de
Greece	+30 210 2717265	www.smchellas.gr	sales@smchellas.gr
Hungary	+36 23513000	www.smc.hu	office@smc.hu
Ireland	+353 (0)14039000	www.smcautomation.ie	sales@smcautomation.ie
Italy	+39 03990691	www.smcitalia.it	mailbox@smcitalia.it
Latvia	+371 67817700	www.smc.lv	info@smc.lv

Lithuania	+370 5 2308118	www.smclt.lt	info@smclt.lt
Netherlands	+31 (0)205318888	www.smc.nl	info@smc.nl
Norway	+47 67129020	www.smc-norge.no	post@smc-norge.no
Poland	+48 222119600	www.smc.pl	office@smc.pl
Portugal	+351 214724500	www.smc.eu	apoioclientept@smc.smces.es
Romania	+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Russia	+7 8127185445	www.smc-pneumatik.ru	info@smc-pneumatik.ru
Slovakia	+421 (0)413213212	www.smc.sk	office@smc.sk
Slovenia	+386 (0)73885412	www.smc.si	office@smc.si
Spain	+34 945184100	www.smc.eu	post@smc.smces.es
Sweden	+46 (0)86031240	www.smc.nu	smc@smc.nu
Switzerland	+41 (0)523963131	www.smc.ch	info@smc.ch
Turkey	+90 212 489 0 440	www.smc-pneumatik.com.tr	info@smc-pneumatik.com.tr
UK	+44 (0)845 121 5122	www.smc.uk	sales@smc.uk